



THE SHOP DOG QUICK START



1. Before Operation, confirm the oil level is within operating range on the sight glass.

NOTE: *THE SHOP DOG* will not start if oil level is below operating range; this will be indicated by the Low Oil Level indicator light. (See owners manual for oil specifications)

2. Plug *THE SHOP DOG* in to a 220V outlet. ("Control Power On" will illuminate)
3. See owners manual for Shop Dog/Implement set up



THE SHOP DOG is operable in either "Local Control" or "Remote Control" mode.

(Use the key located on the remote control lanyard to change modes.)

LOCAL CONTROL

Operate The Shop Dog from the control center when keyed switch is turned to "Local Control".
(See reverse side for Remote Control)

1. Confirm that the red **STOP** Mushroom is pulled out into the run position.
2. Press the **START** button to energize *THE SHOP DOG'S* hydraulic and PTO functions.

STOP



START



PTO

1. Select direction of the PTO with FWD/REV Switch under the safety cover
2. Press one of the momentary Speed 1-4 buttons to start the PTO.
Hold the desired button to keep the PTO in motion
(Speed 1 - 8 RPM, Speed 2 - 20 RPM, Speed 3 - 60 RPM, Speed 4 - 112 RPM)



Hydraulics

1. Pressurize the top two sets of Pioneer pressure connect couplers with the levers located on the top corner of *THE SHOP DOG*.

(Pull back the lever to pressurize the red **LIFT** coupler and push forward to pressurize the yellow **DROP** coupler)
2. Operate the bottom set of hydraulic couplers with the Cylinder lift/drop switch located above the PTO speed controls.



Push the **STOP** mushroom in at any time to cut power to *THE SHOP DOG*.



THE SHOP DOG is operable in either "Local Control" or "Remote Control" mode.
(Use the key located on the remote control lanyard to change modes.)

REMOTE CONTROL

Operate The Shop Dog from with the remote control when keyed switch is turned to "Remote Control". (See reverse side for Local Control)

1. Turn the remote control on by holding the **red** power button for approximately 2 seconds. The **yellow** signal light will begin blinking.
2. Confirm that the red **STOP** Mushroom located on the control center is pulled out into the run position.
3. Press the **START** button on the remote control to energize The Shop Dog's hydraulic and PTO functions.

STOP



Hold power button for 2 seconds to turn the remote control on



Press **START** to energize **THE SHOP DOG**

Press **HORN** to alert others that the PTO is about to start.



PTO

1. Select direction of the PTO with FWD/REV Switch under the safety cover at the control center.
2. Sound the horn to alert others that the PTO is about to start.
3. Press one of the momentary Speed 1-4 buttons to start the PTO. Hold the desired button to keep the PTO in motion.
(Speed 1 - 8 RPM, Speed 2 - 20 RPM, Speed 3 - 60 RPM, Speed 4 - 112 RPM)

Press one of the momentary **SPEED 1-4** buttons to start the PTO.

Hydraulics

1. Operate the bottom set of hydraulic couplers with the **CYL IN** and **CYL OUT** buttons on the remote control.

(CYL Out will pressurize the red **LIFT** coupler and CYL IN will pressurize the yellow **DROP** coupler)

Use the **CYL IN** and **CYL OUT** buttons to operate the bottom set of hydraulic couplers.



Push in the **STOP** mushroom or the **STOP** button on the remote control at any time to cut power to **THE SHOP DOG**.

STOP



Turn the remote control off by holding the **red** power button for approximately 5 seconds.